



Rockwell Collins – Disable Instructions (Revised 03-11-2016)

1. On initial power up of FMS, Select **IDX** key. This will display **INDEX 1/2** page.
 2. Select **MCDU MENU** (LSK 1L). This will display the **MCDU MENU**.
 3. Select **DL** (LSK 2L). This will display the **DL APPLICATION MENU**.
 4. Select **TECHNICAL** (LSK 4R). This will display the **DL TECHNICAL MENU**.
 5. Select **PASSWORD** (LSK 5R). This will display the **DL PASSWORD** page.
 6. Type in the *displayed GMT time* and select **PASSWORD** (LSK 1L). This will display the **DL PROTECTED MENU** page.
 7. Select the **APM MENU** (LSK 1L). This will display a “!!!WRITE* ALERT!!!” warning page.
 8. Select **APM MENU** (LSK 1L) again. This will display the **DL APM MENU**.
 9. Select **IDENT BLK PGM** (LSK2L). This will display the **DL IDENT BLK PGM** page.
 10. To remove the Universal's *Airline code (UV)*, place an inactive airline code such as RB, TT or ZB on the scratchpad then select **DLNK ADDR** (LSK 3L). Then select **WRITE*** (LSK 5R) and note the code moves to **DLNK ADDR** active green indication. This will replace the UV with the new airline code you chose.
 11. Select **RETURN** (LSK 6L). This will return to the **DL APM MENU** page.
 12. Select **RETURN** (LSK 6L). This will return to the **DL POTECTED MENU** page.
 13. Select **VHF SCAN** (LSK 3L). This will display the **DL VHF SCAN 1 / 2**
 - a. Select LSK of desired **VHF Region** to be *de-activated*, Smaller Font will be displayed if VHF network is de-activated, (Larger Font indicates network is activated). NOTE: Check both pages using the *NEXT* key to ensure all ARINC and VHF networks are de-activated.
 14. Select **RETURN** (LSK 6L). This will return to the **DL PROTECTED MENU** page.
 - a. (All changes in the protected menu will be saved upon selecting RETURN)
 15. Select **RETURN** (LSK 6L). This will return to the **DL TECHNICAL MENU** page.
 16. Select **RETURN** (LSK 6L). This will return to the **DL APPLICATION MENU** page.
- To disable Automatic Position reports:
17. Select **AOC CORP** (LSK 2R). This will display the **DL DATALINK MENU 1/2** page.
 18. From the **DL DATALINK** page, select *NEXT* to display **DL DATALINK** page 2 / 2.
 19. Select **POS/TIME RPTS** (LSK 3R)
 - a. **AUTO POS RPT** (LSK 1L), toggle between to ensure “**DISABLED**”.
 20. Select **OFF/ON PT** (LSK 1R)
 - a. Toggle between “**DISABLED**”.
 21. Select **RETURN** TWICE to return back to the DL APPLICATION MENU. (ALL CHANGES WILL BE STORED)