



Worldwide ground supportsm



VENEZUELA | Caracas

SVMI/CCS

N10° 36' 11.22" / W066° 59' 26.10"
28/10 11,483 ft. x 148 ft.

Simón Bolívar International Airport

235 ft. 011° W Multi R -4 AVGAS/JET
HIRL ILS VORTAC AOE

Company name: Universal Weather and Aviation de Venezuela C.A.

Main office: Caracas, Venezuela

ICAO: SVMI

Locations served: All of Venezuela

Radio frequency: 132.95 MHz

SITA: N/A

Manager: Walter Lindo

Phone: +58 212 3552025

Mobile: +58 414 7894929

Fax: +58 212 3552514

E-mail: venezuela@universalaviation.aero

Web: universalaviation.aero

With Universal Aviation in Caracas, you...

Go Confident

- Instantly recognizable staff with Universal Aviation uniforms
- 24/7 staff availability
- Industry-leading training and audit system


Go Convenient

- Crew visas available on arrival with advance notice
- Customs and immigration clearance inside the terminal
- Security provided by both private and government agencies
- VIP lounge and restaurant

Go Competitive

- Competitive handling rates billed directly by this Universal Aviation location or through your Universal[®] account
- Attractive fixed payment terms through UVair[®]

Simón Bolívar International Airport

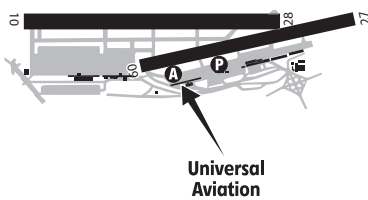

A Parking areas

P Passenger meeting areas

See next page for driving directions.

Ground support capabilities

- Crew visas available on arrival with advance notice
- Customs and immigration clearance inside the terminal
- UVair[®] contract fuel available
- On-site catering coordination
- Discount crew accommodations at local hotels
- Transportation via taxi, bus, limousine, and rental cars
- Security provided by both private and government agencies
- VIP lounge and restaurant
- Credit available

Flight Support

- **RVSM:** Implemented January 2005
- **ACAS/TCAS II:** Required for certain types of aircraft; check AIP
- **ICAO Annex 16, Chapter II:** Restrictions
- **RNP 10 Airspace:** Not implemented
- **8.33 MHz Channel Spacing:** Not implemented as of 2002
- **Airport Fire Protection Category:** SVMI: 10
- **ICAO flight plans remain in system for 60 minutes after ETD**



VENEZUELA | Caracas

SVMI/CCS

N10° 36' 11.22" / W066° 59' 26.10"
28/10 11,483 ft. x 148 ft.

Simón Bolívar International Airport

235 ft. 011° W Multi R -4 AVGAS/JET
HIRL ILS VORTAC AOE

City view



 **Driving directions**

Directions to airport

Autopista Caracas-La Guaira is the major highway from Caracas to the airport. Follow the signs to Aeropuerto Simón Bolívar and look for the Domestic Terminal (Terminal Nacional) to the right side. Make a U-turn to the Auxiliary Terminal.

Facility contact information

Universal Weather and Aviation de Venezuela C.A.
Auxiliary Terminal
Simón Bolívar International Airport
Maiquetía, Estado Vargas 1160
Venezuela

Manager: Walter Lindo

Phone: +58 212 355205

Mobile: +58 414 7894929

USA +1 281 814 5249

Fax: +58 212 3552514

E-mail: venezuela@universalaviation.aero

Web: universalaviation.aero

Airport view

